


Component Removal and Install Procedures

The following pages contain the procedures for component removal and installation on a selected aircraft

Log in to the Dent and Buckle website at the following address:


https://cam-abx.dentandbuckle.com

The screen below should appear for entry of your user name and password

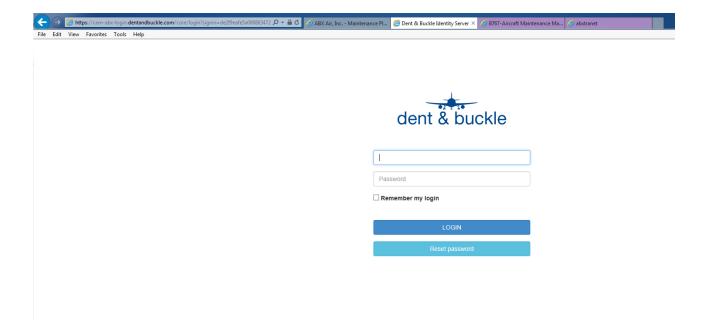


For component removal from an aircraft, follow the steps listed on the next few pages.


Once you have logged in, the following screen will appear:

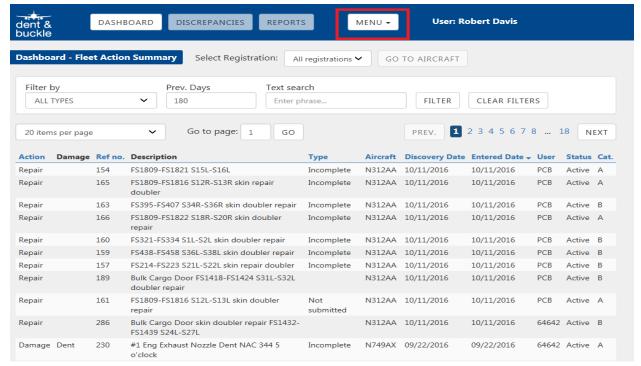


Select the Menu button and then select Aircraft List from the drop down menu

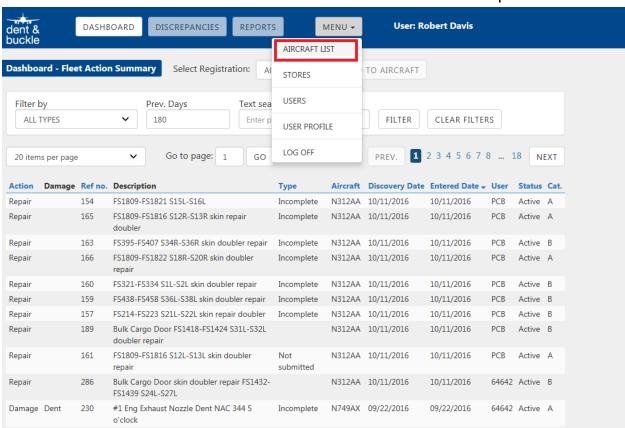


The following screen will appear. Select the aircraft that the component will be removed from

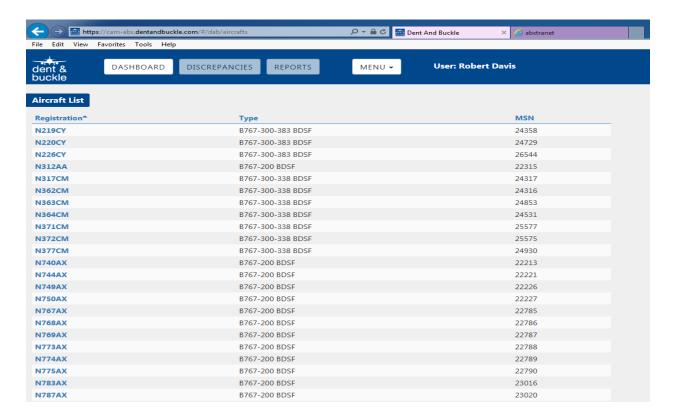


Select the component that will be removed

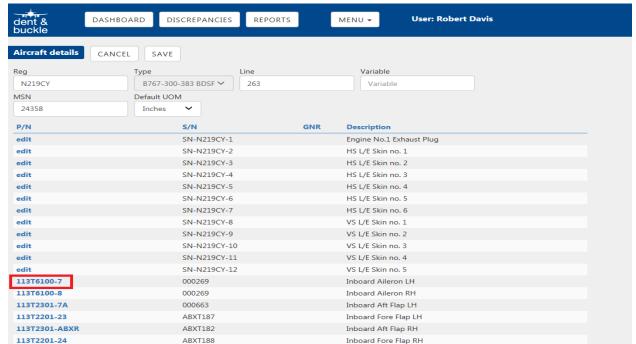

Select the Move To Stores button

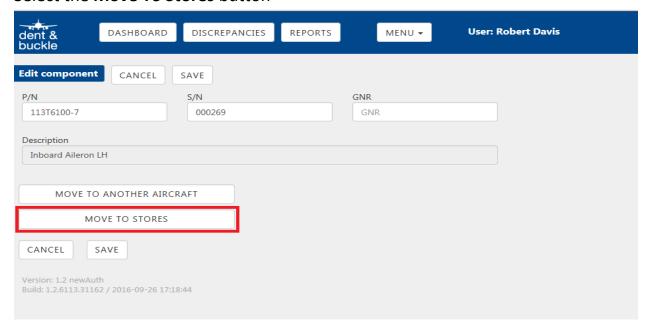


Once you have selected **Move to Stores** button, the Aircraft Details list will reappear that shows the part removed from the aircraft

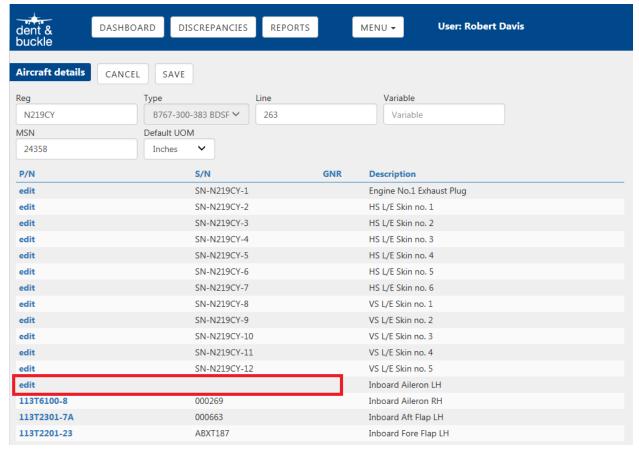


Component Installation

Go to the Menu tab and select Stores from the drop down menu

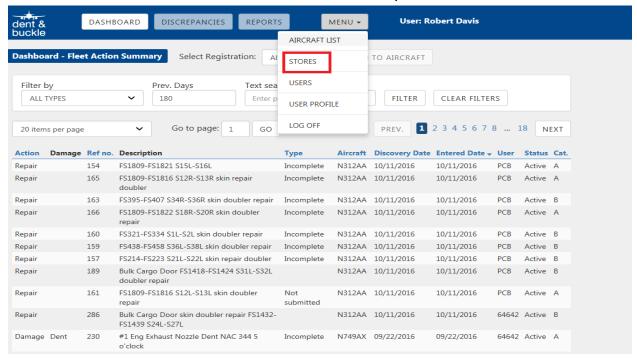


Select the component that you wish to install

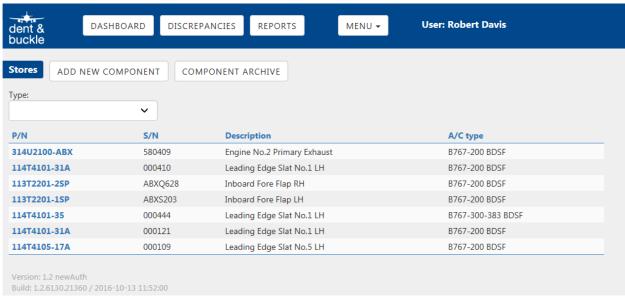


Select the destination aircraft from the drop down listing and then click on the Save button.




If you try to install a component on an aircraft that already has a component installed in that position, a warning screen will pop up

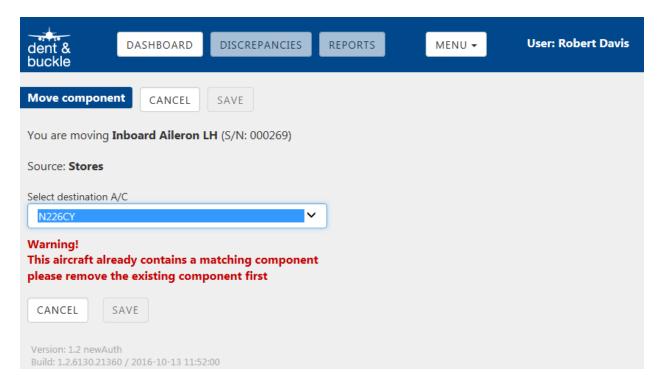

If you do not see the component that you wish to install listed in the Stores inventory, the part can be manually loaded into Stores. Select the **Add New Component** button on the Stores screen

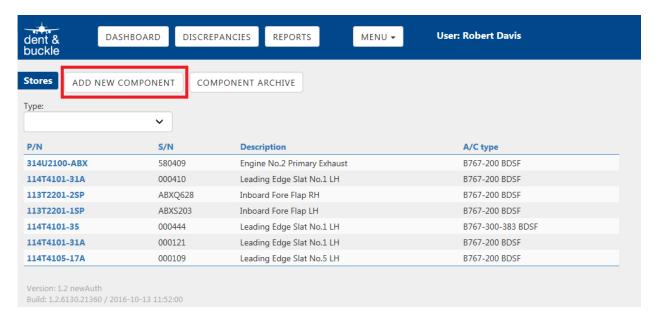

Choose the Aircraft Type and component from the drop down menus and enter the part number and serial number.

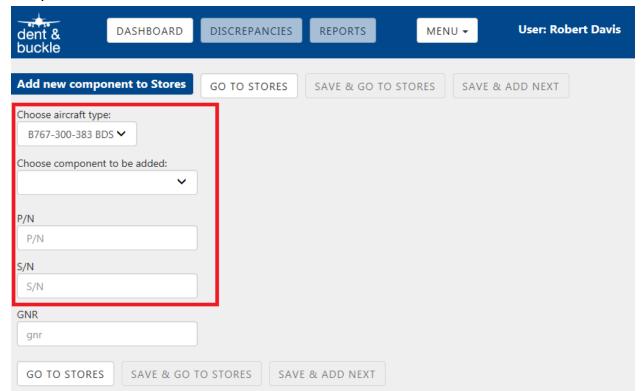

Select the **Save & Go To Stores** button to install the part on the aircraft or select the **Save & Add Next** if you have more components to load into stores