



GENERAL NOTES:

1. Jack NLG and remove Left and Right Wheel & Tire Assemblies to access placard installation areas on NLG Piston/Axle. (Ref. AMM 32-45-02)
2. Thoroughly clean and dry placard installation areas prior to application of placard.
3. Seal edges of placards using edge sealer P/N 8000B0900BPAX22K or equivalent after installation.
4. Reinstall Left and Right Wheel & Tire Assemblies after placard installation and down jack NLG. (Ref. AMM 32-45-02)


Nose Landing Gear


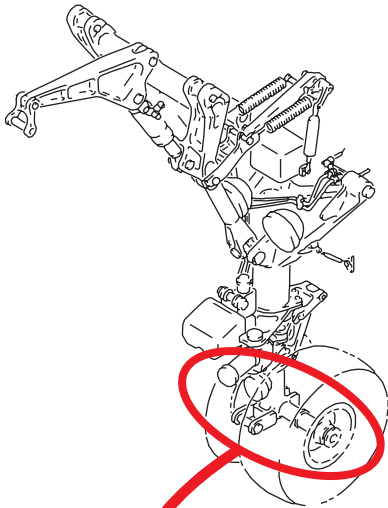


Nose Landing Gear  
Piston/Axle Assembly  
Wheel & Tire Installation

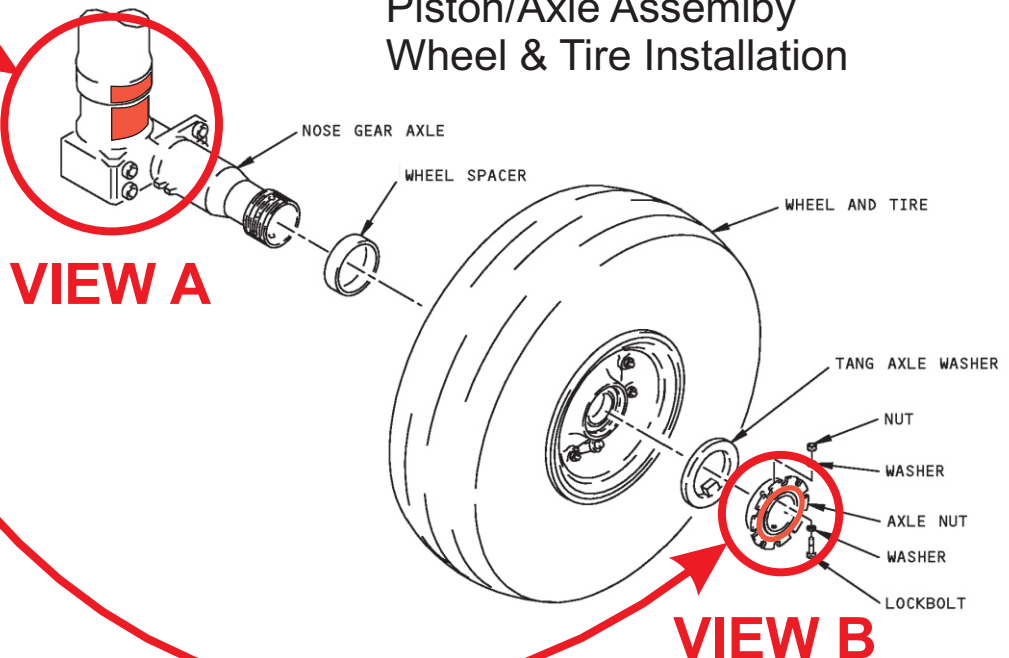


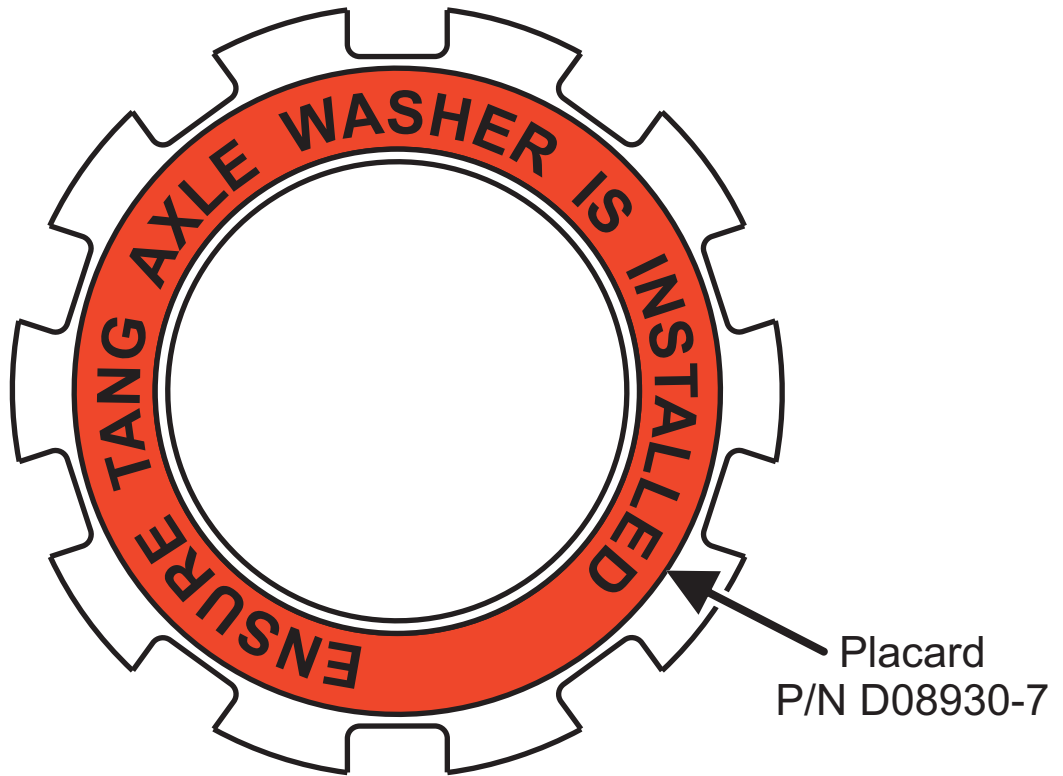
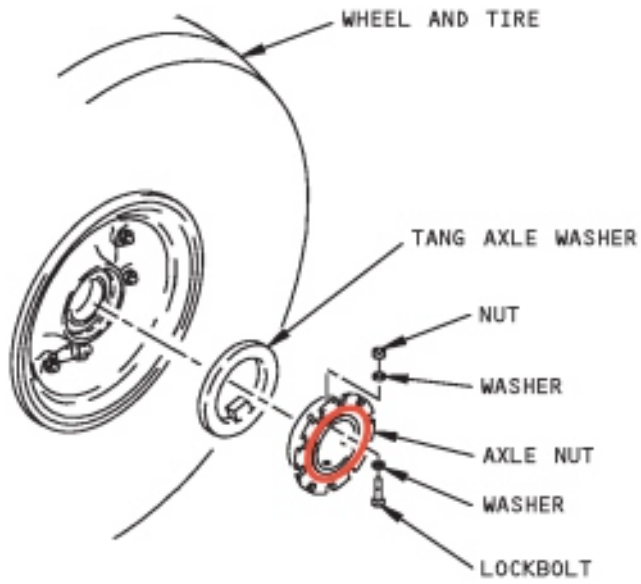
<p>PREPARED BY/DATE Joe C. Freese 06/07/2012</p>
<p>APPROVED BY/DATE Phil Flowers 06/07/2012</p>

 <p><b>ENGINEERING SKETCH</b></p>	
<p>TITLE Install - Placards, NLG Tang Axle Washer Installation, B767</p>	
<p>SKETCH NO. ES02473</p>	<p>REV. \$</p>
<p><b>PAGE 1 OF 3</b></p>	

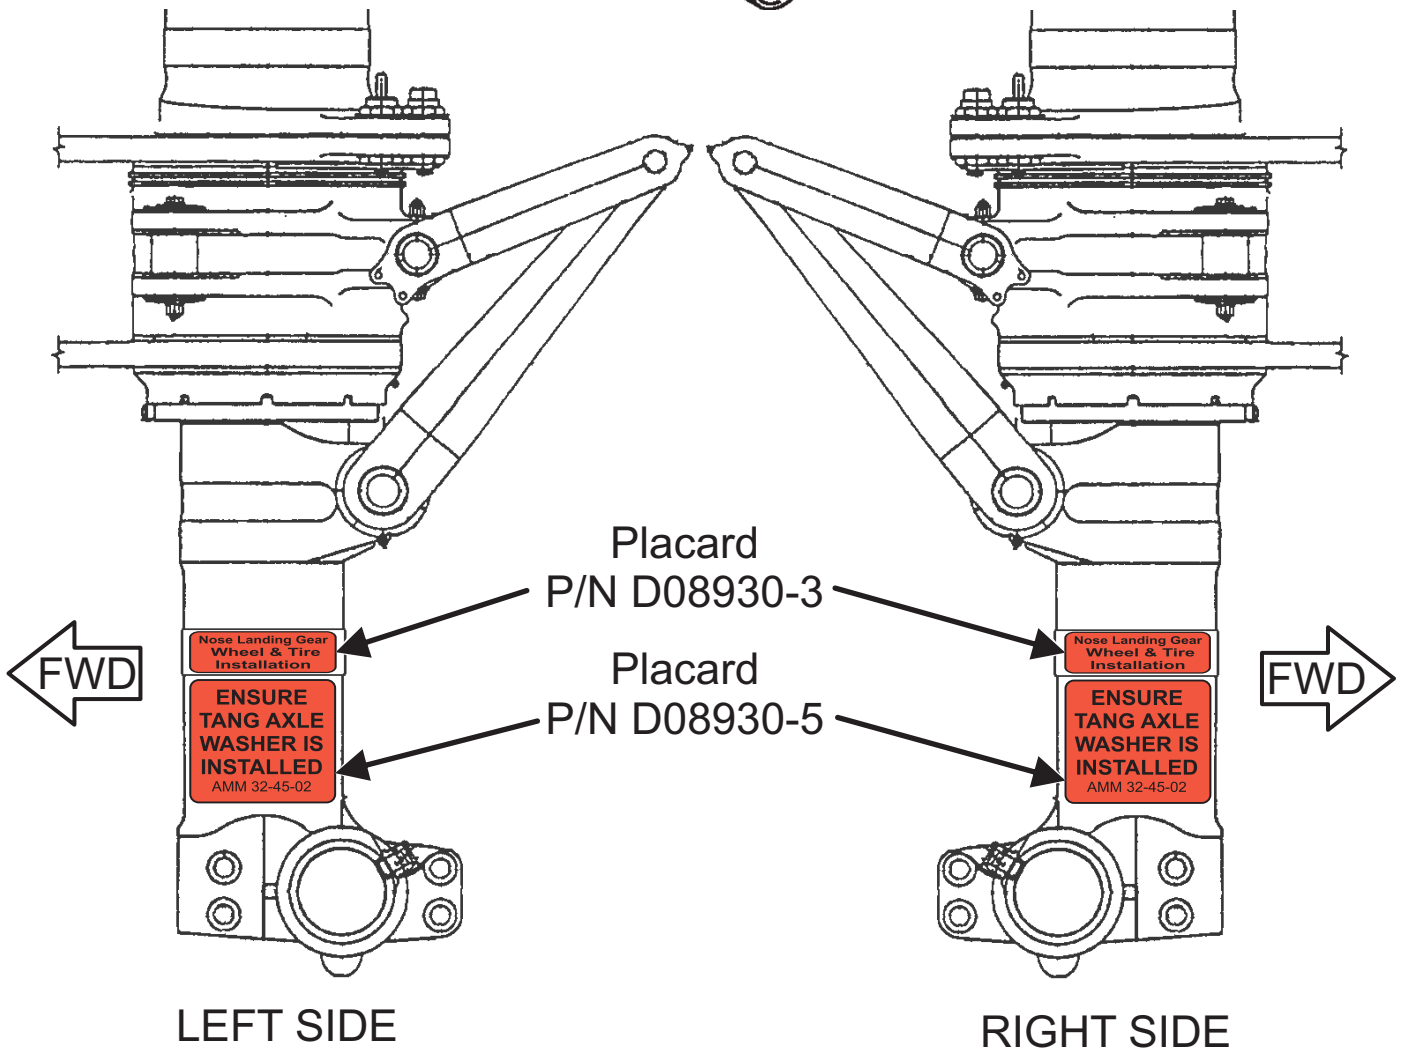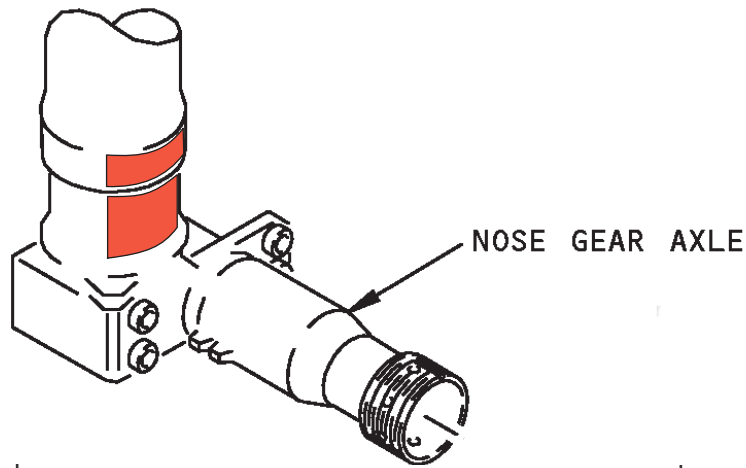


# VIEW A

		<b>ENGINEERING SKETCH</b>	
TITLE Install - Placards, NLG Tang Axle Washer Installation, B767			
SKETCH NO.	REV.	PAGE 2 OF 3	
ES02473	\$		



LEFT AND RIGHT NLG AXLE NUTS

# VIEW B

		<b>ENGINEERING SKETCH</b>	
TITLE Install - Placards, NLG Tang Axle Washer Installation, B767			
SKETCH NO.	REV.	PAGE 3 OF 3	
ES02473	\$		